


SYNCOPE

4000FB 01

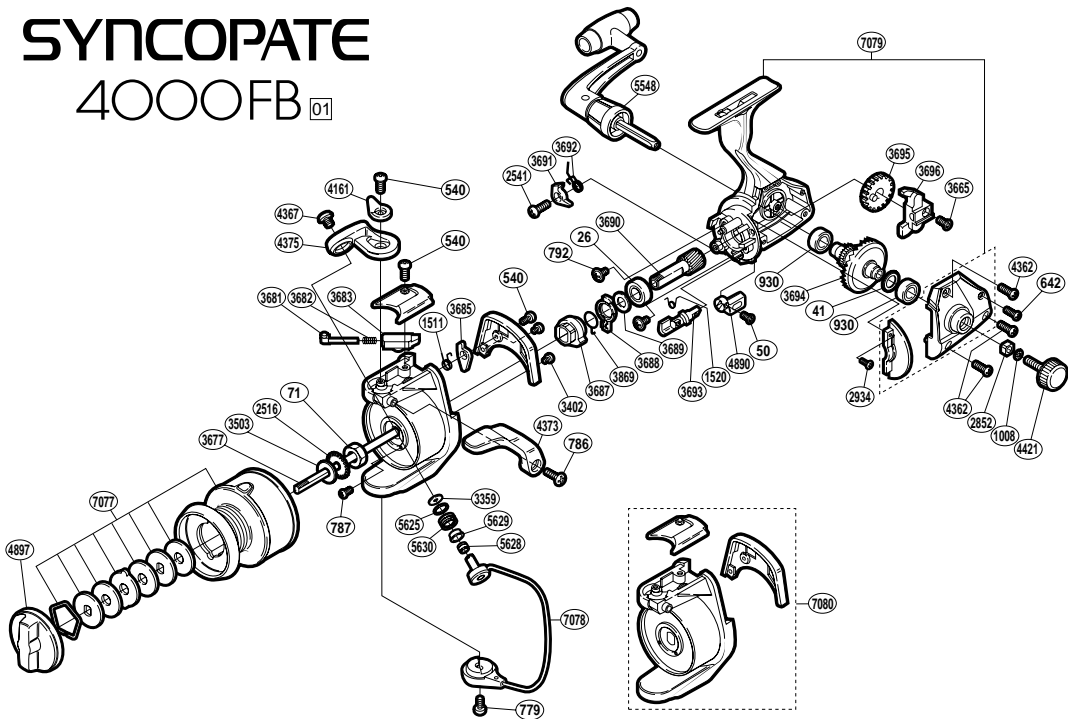

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3402	Cover Screw	4161	Trigger Cam
0041	Drive Gear Washer	3503	Spool Washer	4362	Side Cover Screw (large)
0050	Anti-Reverse Lever Screw	3665	Slider Retainer Screw	4367	Line Roller Screw
0071	Rotor Nut	3677	Main Shaft	4373	Quick-Fire II Trigger
0540	Multi-Purpose Screw	3681	Bail Spring Guide (A)	4375	Bail Arm
0642	Side Cover Screw (small)	3682	Bail Spring	4421	Handle Screw Cap
0779	Bail Hold Support Screw	3683	Bail Spring Guide (B)	4890	Anti-Reverse Lever
0786	Trigger Screw	3685	Bail Trip Lever	4897	Drag Knob
0787	Nut Lock Screw	3687	Anti-Reverse Ratchet	5548	Handle Assembly
0792	Bearing Retainer Screw	3688	Anti-Reverse Lock Out	5625	Line Roller Spacer
0930	Ball Bearing	3689	Bushing Washer	5628	Line Roller Collar
1008	Handle Lock Washer	3690	Pinion Gear	5629	Line Roller Bushing
1511	Lever Spring	3691	Anti-Reverse Pawl	5630	Line Roller
1520	Anti-Reverse Cam Spring	3692	Anti-Reverse Pawl Spring	7077	Spool Assembly
2516	Spool Support	3693	Anti-Reverse Cam	7078	Bail Assembly
2541	Anti-Reverse Pawl Screw	3694	Drive Gear	7079	Body Assembly
2852	Handle Screw Lock	3695	Oscillating Gear	7080	Rotor Assembly
2934	Flange Screw	3696	Oscillating Slider		
3359	Line Roller Washer	3869	Anti-Reverse Lock Out Spring		